


NOT FOR RESIDENTIAL USE



TROUBLESHOOTING LED'S

HOIST INTERLOCK	EXTERNAL INTERLOCK	24 VOLTS DC	STB ENABLE	INDICATION
			OFF	STB DISABLED OR STB WIRING SHORT
			ON	STB ENABLED
ON	ON	ON		NORMAL OPERATING CONDITION
OFF	ON	ON		HOIST INTERLOCK SWITCH OPEN: 1.) HOIST RELEASE NEEDS RESET. 2.) HOIST INTERLOCK CONNECTOR NOT PLUGGED IN. 3.) HOIST INTERLOCK DEFECTIVE.
OFF	OFF	ON		EXTERNAL INTERLOCK OPEN
OFF	OFF	OFF		POWER SUPPLY PROBLEM: 1.) CHECK AC POWER SUPPLY. 2.) CHECK MAIN POWER FUSE. 3.) CHECK SECONDARY FUSE (2A)

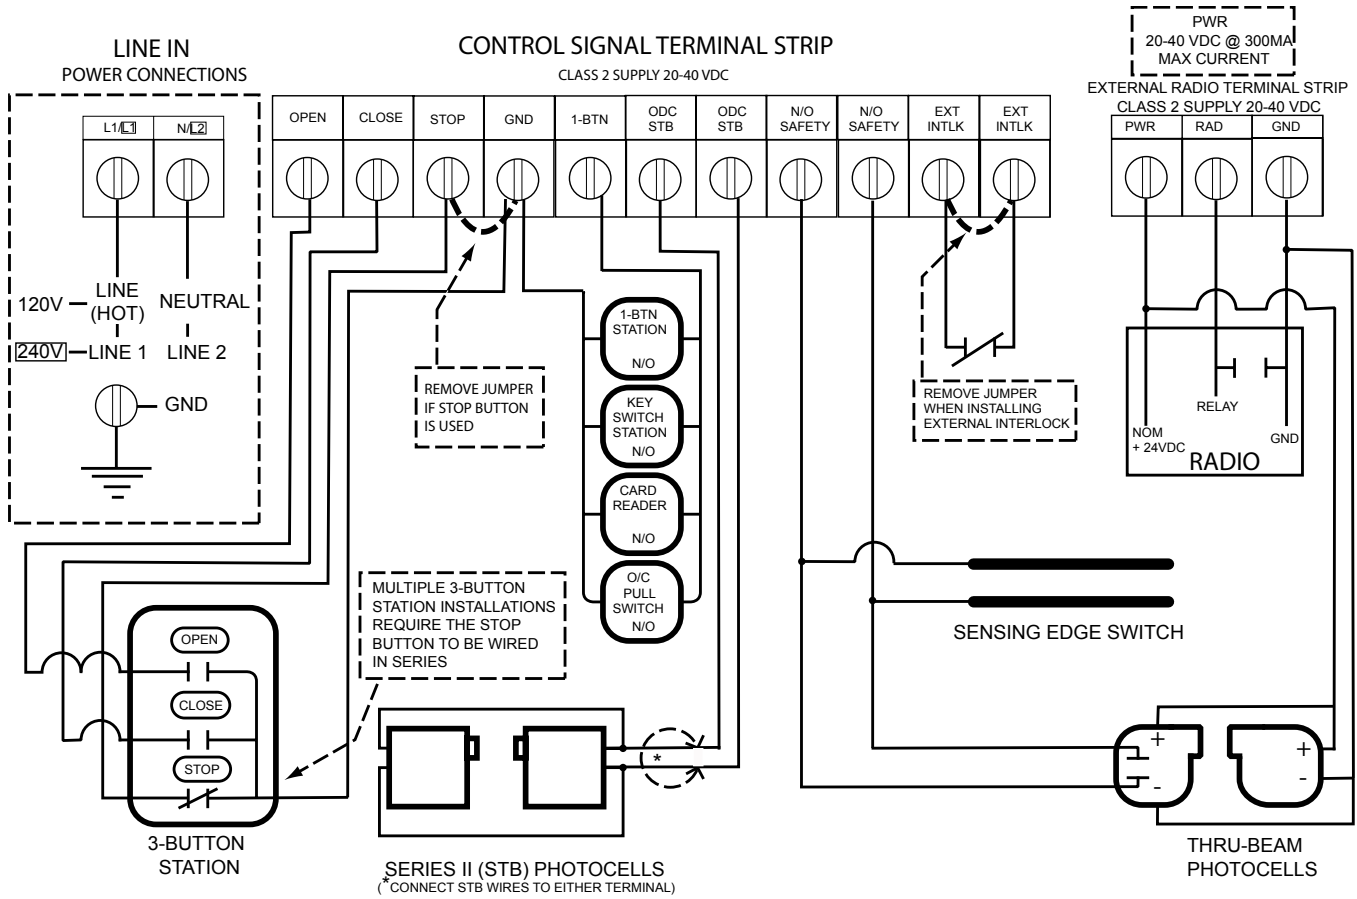


GCL-MJ

MEDIUM-DUTY JACKSHAFT OPERATOR

WIRING DIAGRAM

WARNING: FOR CONTINUED PROTECTION AGAINST FIRE, REPLACE FUSES ONLY WITH THE SAME TYPE AND RATING

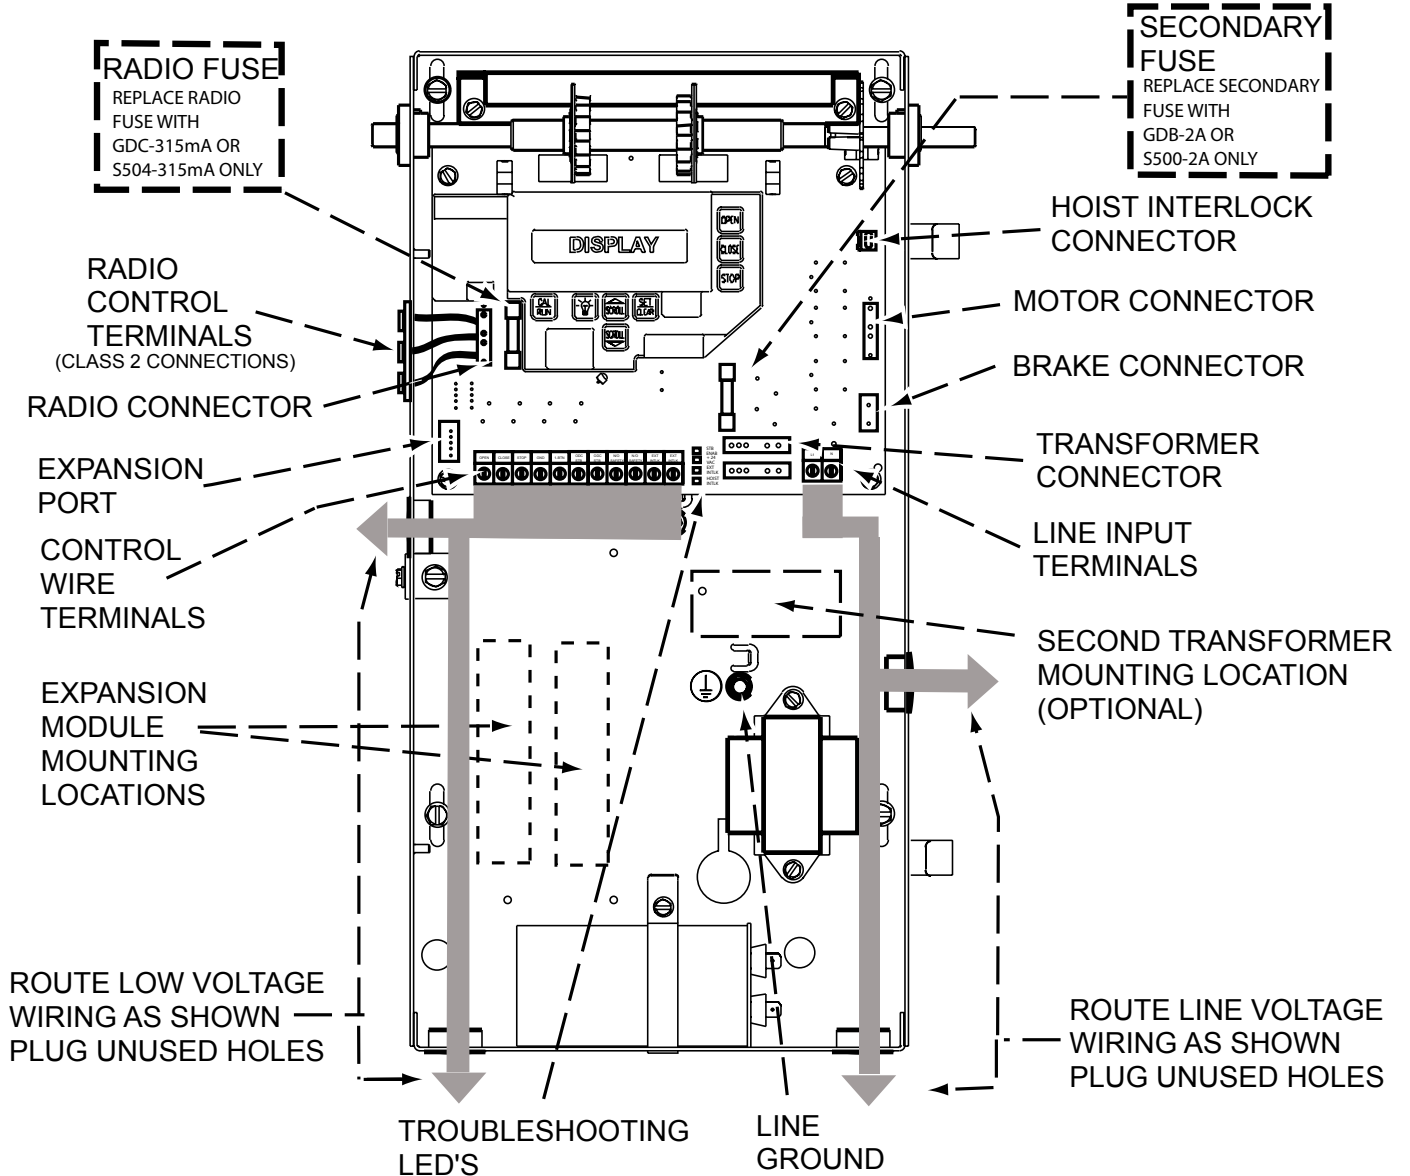

CAUTION: To prevent the motor protector from tripping, do not exceed 15 cycles of opening and closing per hour. For limited-duty ONLY.

110851.000

